DUMP CART COVER

MFG.NO. 1600395

FORM - 1650759
PRINTED IN U.S.A
746

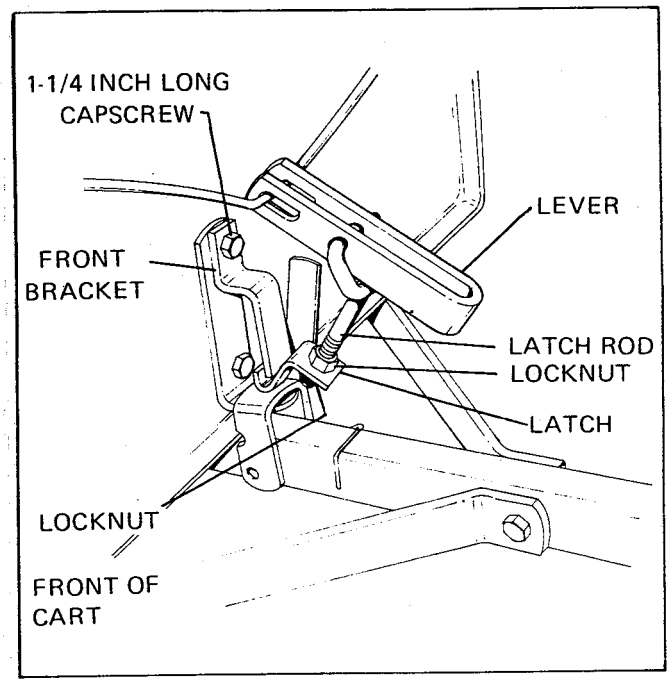

Figure 5.

10. Secure the loose link of rear bail and link assembly (two links on each end of bail) to rear pins with two flat washers and locknuts. Repeat same procedure for front bail and link assembly (one link on each end of bail).

11. Insert rear latch rod through lever holes and secure it with a cotter pin (Figure 6). Install locknut, latch, and locknut on latch rod. With lever in closed position, adjust latch until it is securely hooked under cart. Repeat procedure for front side with latch tight under bracket (Figure 5).

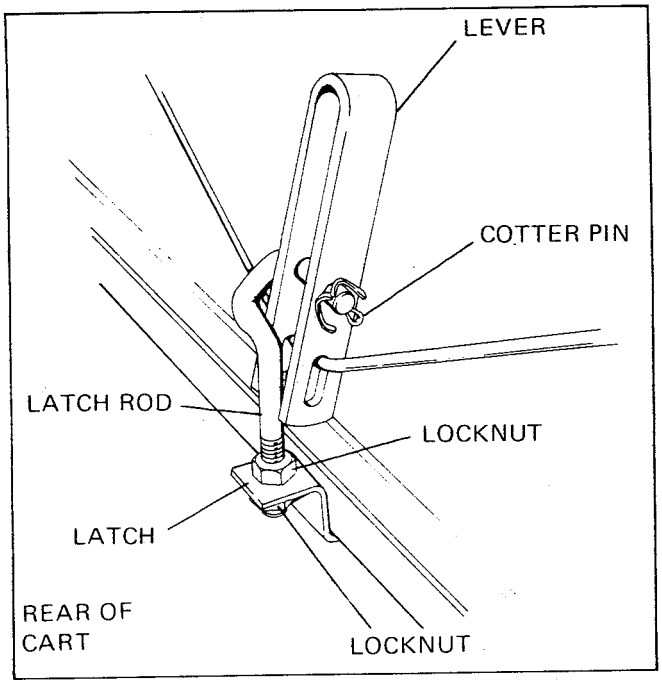

Figure 6.

12. Insert hose in cover nozzle at least 12 inches and tighten cover nozzle around hose with belt (Figure 7).

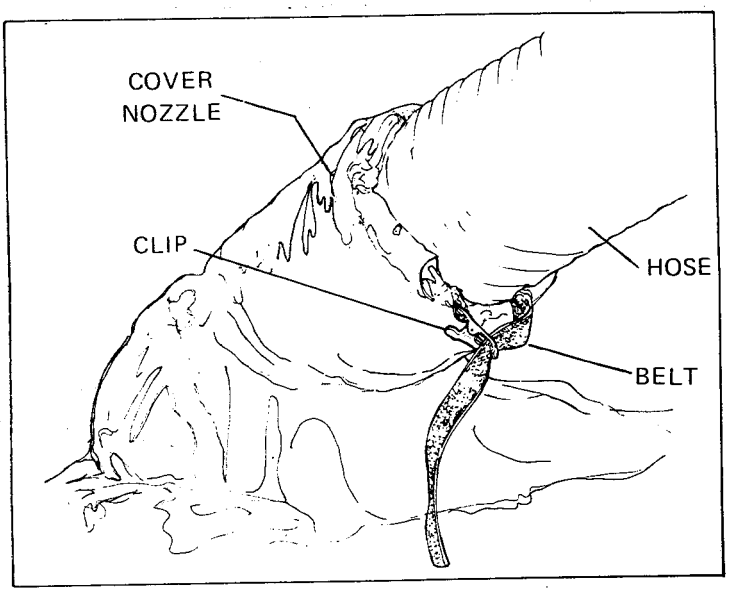

Figure 7.

INSTALLATION

1. Hang two side panels on outer sides of cart.

2. Insert side and end reinforcing bars in cart cover with side bar bends pointing inward.

3. Align reinforcing bar holes and flat washer. From inside, insert pin through holes and secure bars and washer with a hex nut (Figure 1). Repeat procedure for all four corners.

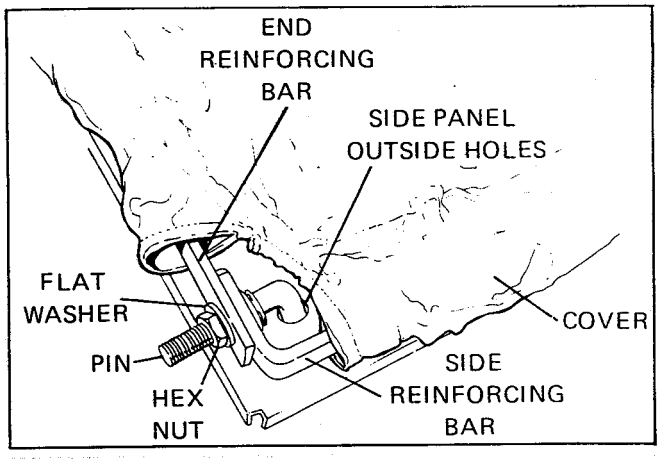

Figure 1.

4. Secure belt stop to inside front of side panel with two flat washers (one above and one below side panel), special washer, 3/4 inch long capscrew, and locknut (Figure 2). Position belt stop at angle illustrated. Repeat procedure for remaining front corner.

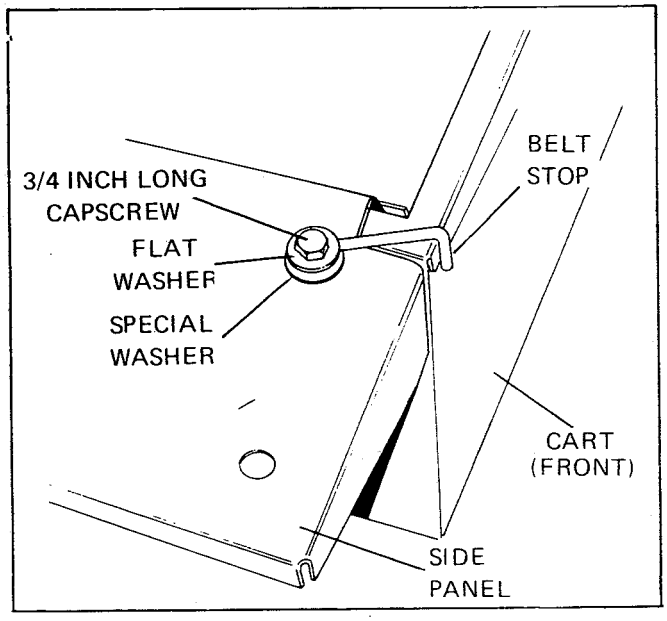

Figure 2.

5. Secure bracket to inside rear of side panel with two special washers (above side panel), a flat washer (under side panel), a 3/4 inch long capscrew, and locknut (Figure 3). Position side panel bracket at angle illustrated. Repeat procedure for remaining rear corner.

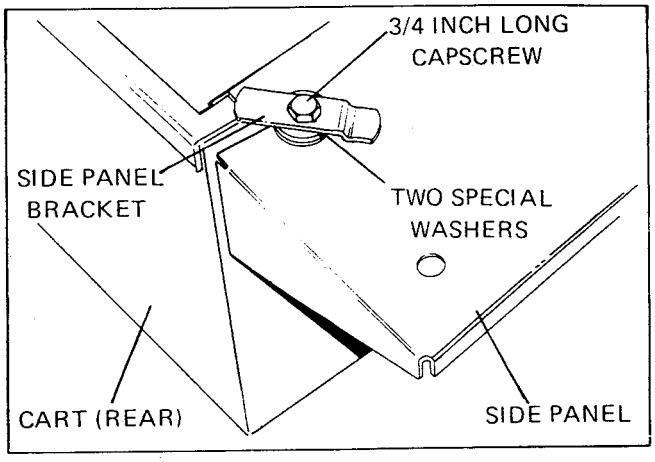

Figure 3.

6. Lay cover assembly on cart with canvas side flaps inside and cover nozzle toward cart drawbar. Be sure pins are inserted completely into side panel outside holes (Figure 1).

7. Insert each bail through slotted hole in lever and center the lever on the bail (Figure 4).

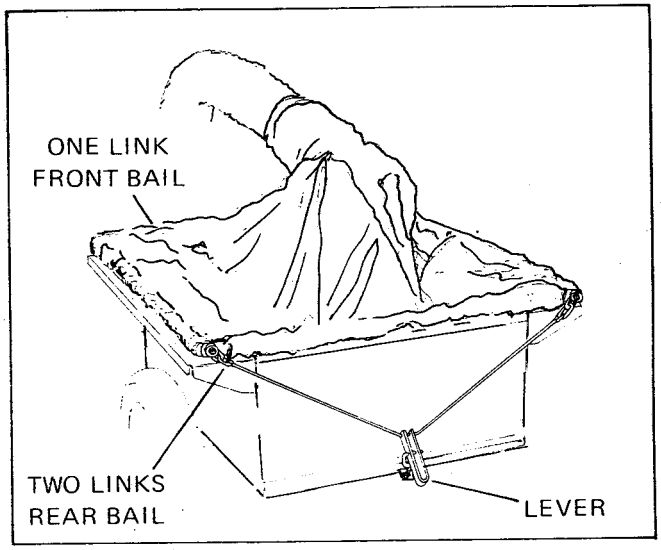

Figure 4.

8. Attach one link to each end of one bail and two links to each end of other bail (Figure 4). The bail with two links each will be placed later at rear of cart and the bail with one link each at the front.

9. Secure bracket to front of cart with 1-1/4 inch long capscrew (Figure 5).